



---

**INDUSTRIAL CONTROL COMMUNICATIONS, INC.**

---

# **USB Serial Sniffer Settings Driver Manual**

---



## TABLE OF CONTENTS

<b>1</b>	<b>USB Serial Sniffer .....</b>	<b>2</b>
	1.1 Overview .....	2
	1.2 Sniffer Settings.....	2

# 1 USB Serial Sniffer

## 1.1 Overview

This driver is used to configure the serial port to sniff packets on the connected network without loading a protocol driver. Note that this driver is used in conjunction with the USB Virtual COM Port when it has been configured for Serial Sniffer.

## 1.2 Sniffer Settings

### Baud Rate

Selects the baud rate of the network.

### Parity

Selects the parity and number of stop bits.



**INDUSTRIAL CONTROL COMMUNICATIONS, INC.**

1600 Aspen Commons, Suite 210  
Middleton, WI USA 53562-4720  
Tel: [608] 831-1255 Fax: [608] 831-2045

<http://www.iccdesigns.com>

Printed in U.S.A